



Instructions to Flush Hydraulic Pump

- 1) Drain or pump fluid from pump reservoir.
- 2) Loosen the hose clamp which holds the tank on the pump.
- 3) Remove the tank.
- 4) Remove the screen pick-up tube using channel locks or pliers.
- 5) Wash both the tank and pick-up tube with a strong detergent. This may require several minutes under hot water. Generally, the pick-up tube is plugged extensively.
- 6) Re-install pick-up tube.
- 7) Re-install tank and tighten hose clamp.
- 8) Replace hydraulic fluid.